 



FOLLOW THE INSTALLATION INSTRUCTION INCLUDED WITH THE VDO FUEL LEVEL SENDER.




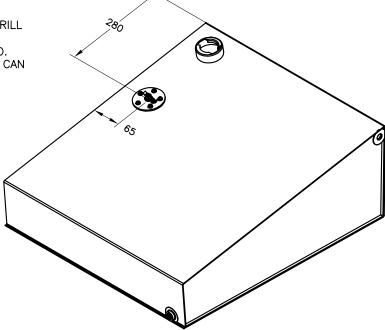



CHECK: 280mm MEASURE FROM THE FRONT OF THE TANK WILL ALLOW FOR THE MAXIMUM DISTANCE BETWEEN THE TANK AND THE TOP OF THE WING.


POSITION OF THE FUEL LEVEL SENDER ON THE TOP OF THE TANK


ST	OL
CH	801

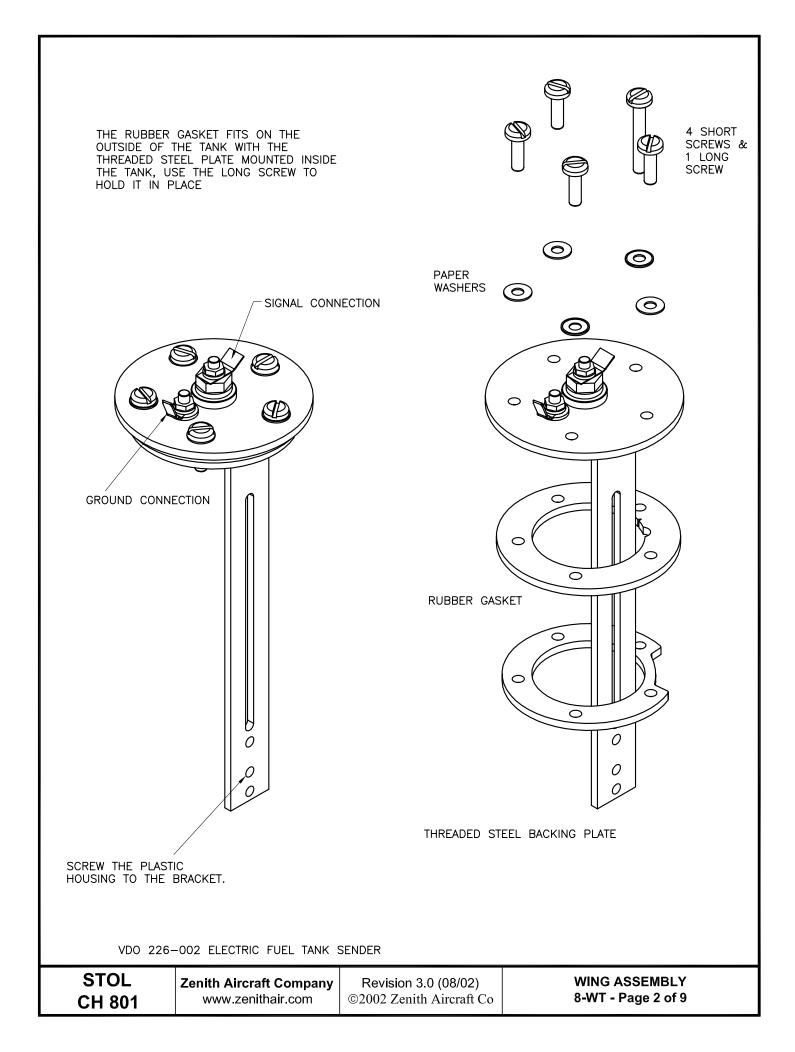

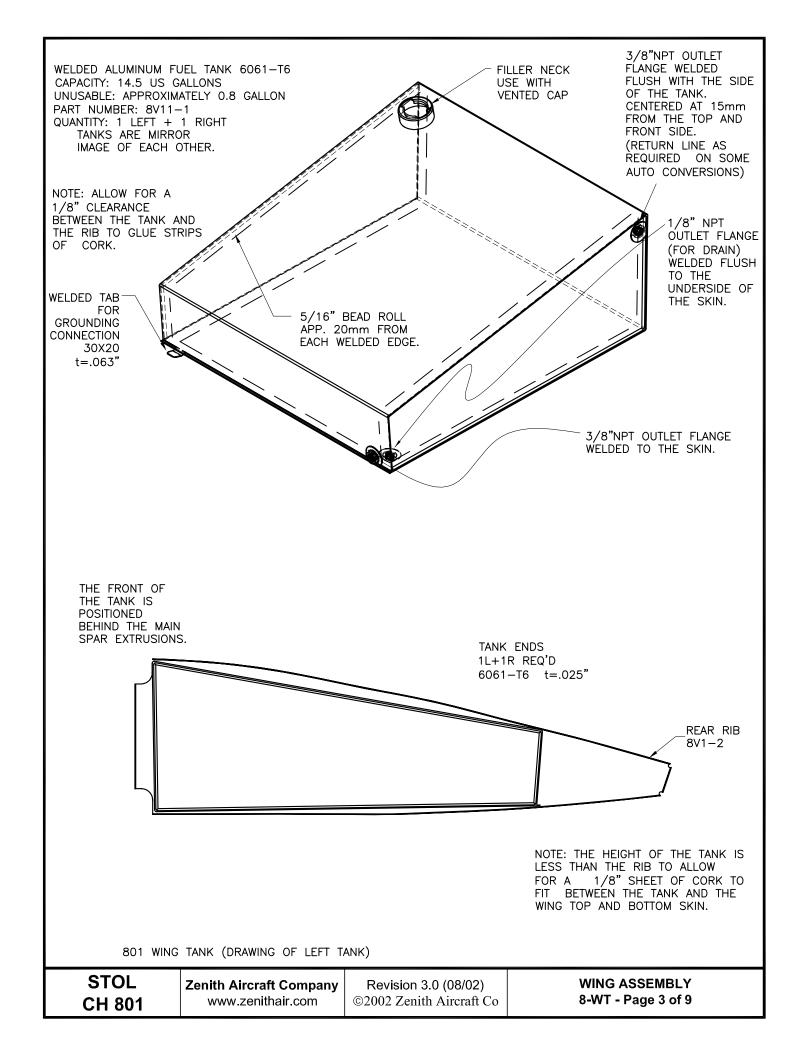

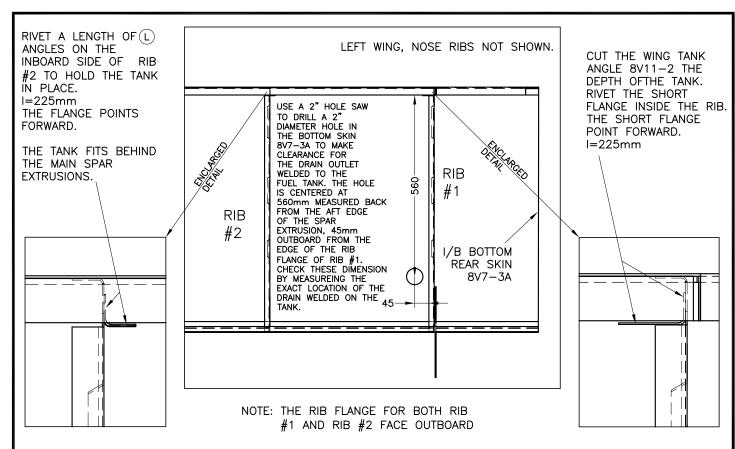

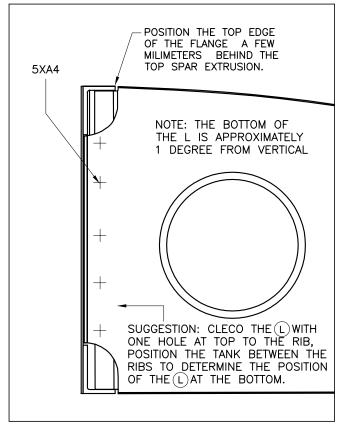

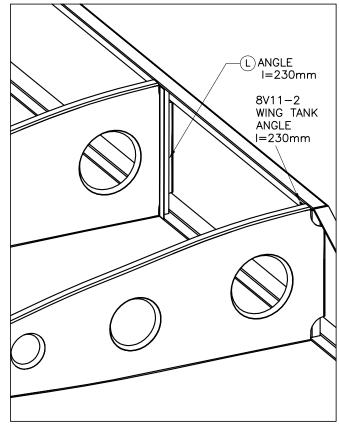

DRILL A 2" HOLE IN THE BOTTOM SKIN FOR THE TANK DRAIN. RIVET THE WING TANK SUPPORT ANGLE 8V11-2 TO RIB #1 AND A LENGTH OF L ANGLE ON RIB #2.

ST	OL
СН	801

